



BT2000 Battery Tester Quick Setup Guide

How to Personalize Battery Test Printout:

1. After installing AA batteries, connect battery tester to a 12 volt battery
2. On the menu screen, scroll to and select "Information"
3. Enter up to 4 lines and 16 characters per line of personalized store information, spaces do count as a character (ex. Name of store, phone number, etc.)
4. Once customization is complete, perform a battery test; once test is complete, print receipt to confirm that your selected customized wording at bottom of receipt is correct
5. If customized wording is not correct, please repeat steps 2-4

How to Operate Battery Tester:

Step 1. Connect battery tester to the battery terminals

Step 2. Select type of test you would like to perform "BATTERY TEST" (Used on 99% of vehicles), "START-STOP TEST" (Used on vehicles such as BMW, Mercedes and Porsche with Start-Stop battery technology) or "SYSTEM TEST" and press <<Enter>>

Step 3. Select battery type "EFB/AGM FLAT PLATE" or "FLOODED" (most common battery type), AGMF, AGMS, VRLA, GEL and press <<Enter>>

Step 4. Select battery rating "SAE/CCA" (most common battery rating), "EN", "IEC", "DIN", (*note SAE & CCA are same) and press <<Enter>>

Step 5. Input battery capacity (*note SAE & CCA are same) and press <<Enter>>

Step 6. Confirm the battery location and press <<Enter>>

Step 7. Device will begin testing battery

Step 8. Point tester to battery to receive temperature measurement and press <<Enter>>

Step 9. Tester will display test results for Temperature, SOC (State of Charge), SOH (State of Health) press <<Enter>>

Step 10. Tester will display test code press <<Enter>>

Step 11. Select "YES" or "NO" to print test results press <<Enter>>

Battery Tester Warranty:

12 Month Limited Warranty

Need Replacement Cables?

To order replacement cables part # R201, please contact Lynn Parker Associates at 1-844-294-6280 or sales@lpassoc.com

For further questions regarding your DHC battery tester please contact our customer service department at:

Lynn Parker Associates

270 S. Central Blvd Suite 203

Jupiter, FL 33458

Phone: 1-844-294-6280

Email: service@lpassoc.com