



RT777 Battery Tester Quick Setup Guide

How to Personalize Battery Test Printout:

1. After installing AA batteries, connect battery tester to a 12 volt battery
2. On the menu screen, scroll to and select "Customize"
3. Enter up to 2 lines and 16 characters per line of personalized store information, spaces do count as a character (ex. Name of store, phone number, etc.)
4. Once customization is complete, perform a battery test; once test is complete, print receipt to confirm that your selected customized wording at bottom of receipt is correct
5. If customized wording is not correct, please repeat steps 2-4

How to Operate Battery Tester:

Step 1. Connect battery tester to the battery terminals

Step 2. Select the type of test you would like to perform "BATTERY TEST" or "SYSTEM TEST" and press <<Enter>>

Step 3. Select battery type "REGULAR LIQUID", "AGMF", "AGMS", "VRLA/GEL" and press <<Enter>>

Step 4. Select battery rating "*SAE / CCA", "EN", "IEC", "DIN" (***note SAE & CCA are same**) and press <<Enter>>

Step 5. Select battery CCA and press <<Enter>>

Step 6. Device will begin testing battery (if battery is below 8V tester will ask if battery is charged?)

Step 7. Tester will display test results SOC (State of Charge) / SOH (State of Health) press <<Enter>>

Step 8. Tester will display test code press <<Enter>>

Step 9. Select "YES" or "NO" to print test results press <<Enter>>

Battery Tester Warranty:

12 Month Limited Warranty

Need Replacement Cables?

To order replacement cables part # R771, please contact Lynn Parker Associates at 1-844-294-6280 or sales@lpassoc.com

For further questions regarding your DHC battery tester refer to your owner's manual or contact our customer service at:

Lynn Parker Associates
270 S. Central Blvd Suite 203
Jupiter, FL 33458
Phone: 1-844-294-6280
Email: service@lpassoc.com
www.DHCTESTERS.com